

EARISE

K25P

USER INSTRUCTION



www.eariseshop.com

 
WARRANTY

EARISE guarantees one and a half years warranty and 60 days hassle-free return. We provides lifetime technical support. Please reach us via **support@eariseshop.com**.


WARNING

1. Do not place in humid environment or expose to rain. Avoid severe collisions.
2. Keep the product away from high temperature and open flame environment to prevent dangers such as battery explosion.
3. Do not open the cabinet of the product, or it will cause machine damage and other accidents.
4. For maintenance, contact the service station or professional personnel if needed.
5. If any debris or liquid falls into the device, cut off the power immediately. It should only be used after inspection by a professional.
6. Can only be replaced with the same or equivalent type of battery.
7. In order to avoid charging issues, the product must be charged with the original USB cable. Accidents and machine damage caused by using other charging cable will not covered by warranty.


OPERATION PANEL	01
MICROPHONE	02
CONNECTION	03
BLUETOOTH	03
USB Flash Drive	03
AUX IN	03
LINE OUT	03
FUNCTION	04
LED LIGHTS	04
RECORDING	04
CHARGING	04
SPECIFICATION	05
WHAT'S IN THE BOX	05

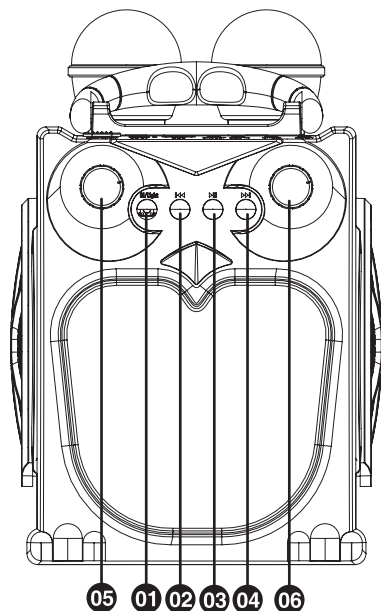

 
- 01** Mode/Light
- 02** Previous Track
- 03** Play/Pause
- 04** Next Track
- 05** Microphone Volume
- 06** Master Volume
- 07** Power On/Off

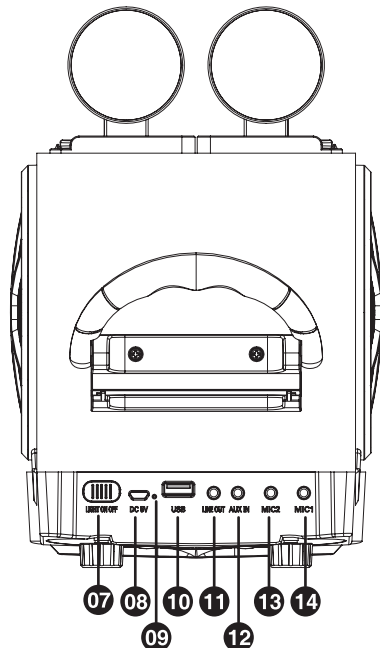

 - 08** USB Charging Port
- 09** Charging Indicator
- 10** USB Flash Drive Slot
- 11** 3.5mm Line Out Port
- 12** 3.5mm AUX In Port
- 13** 3.5mm Mic In Jack 2
- 14** 3.5mm Mic In Jack 1

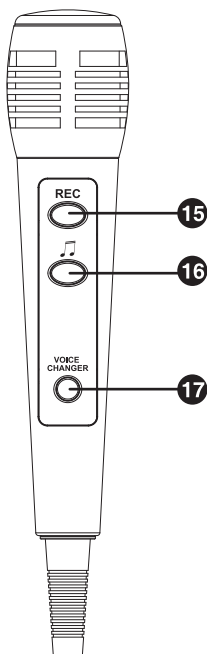

	Key	Function
15	REC	Recording the vocal. Press and hold the button to enter recording mode. (Only works when a USB flash drive is inserted)
16		Built-in a background sound effect, is applause with cheers. Press this button to play the sound effect.
17	Voice Changer	Press this button to change voice effects, the order is original, female, male, monster. Press and hold this button to cancel the voice effect.

BLUETOOTH

1. Power on the machine and the default mode is Bluetooth.
2. Turn on the Bluetooth on your Bluetooth device, search for "EARISE K25P", and click to pair.
3. A voice prompt "Bluetooth connected" to be heard indicates a successful connection.

USB Flash Drive

1. Please ensure that there is at least one song in the USB flash drive, or the speaker can't recognize it.
2. Insert a USB flash drive into a USB flash drive slot, and the speaker will automatically switch to U/TF mode and start playing the existing music from the first song.
3. There are 2 USB flash drive slots, which can be used at the same time.
4. The song file format must be MP3.
5. The USB flash drive must have a capacity of 8G to 32G.
6. The USB flash drive must be USB 2.0 and the file system must be FAT32.
7. If the USB flash drive is formatted and the file system is not FAT32, it will not work properly.

AUX IN

1. You can connect a non-Bluetooth device via AUX IN mode.
2. Connect the K25P with an AUX cable, it will automatically switch to AUX IN mode. Alternatively, you can switch to the AUX IN mode by pressing the "M/Light" button.

LINE OUT

1. You can let the audio output to other audio equipment via LINE OUT jack.
2. Connect the K25P and your other speaker with an AUX cable, the audio will be output to your other other speaker or audio equipment.

LED LIGHTS

1. The lights is on when push the power switch to the LIGHT position.
2. Push the power switch to the ON position, the lights will be turned off.
3. Press and hold the "M/Light" button to choose a light effect.
4. There are 5 light modes: flickering, rotating, filling, rhythm, regular.

RECORDING

1. If want to use the recording function, please insert a USB flash drive.
2. Before recording, make sure that the USB flash drive has sufficient recording storage space.
3. Press and hold the "REC" button on the microphone to start recording, a voice prompt "DiDi" will be heard.
4. During recording, you can press the "REC" button to pause or resume recording.
5. Please note: only the vocal can be recorded, the background music will be paused when recording, so it can't be recorded.
6. Press and hold the "REC" button again to complete the recording.
7. After recording, press the "REC" button to listen to the recorded file.
8. The recording file format is MP3.

CHARGING

1. The volume will automatically decrease to about 70% when in low battery.
2. Use the included USB cable to charge the speaker. (The adapter is not included)
3. During charging, the red charging indicator will light up and will be off when fully charged.
4. Before using for the first time, please fully charged the speaker, and the charging time should not be less than 12 hours.
5. If it's not in use for a long time, please fully charged before use.

SPECIFICATION

Driver Size: 3" 2Ω*2

Output Power: 6W

R.Frequency: 90 Hz-20 kHz

S/N Ratio: ≥60dB

Dimension: 6.9" x 5.7" x 7.7"

WHAT'S IN THE BOX

1 x K25P Karaoke Machine

2 x Wired Microphones

2 x Microphone Holders

1 x USB Charging Cable

1 x User Manual

