

EARISE

T28



USER INSTRUCTION

www.eariseshop.com

 
USER INSTRUCTION



 
DISPLAY SCREEN	02
OPERATION PANEL	03
MICROPHONES	05
BLUETOOTH.....	06
FM RADIO	06
MP3.....	07
RECORDING	07
TWS PAIRING	08
CHARGING INSTRUCTION	09
SPECIFICATION	09
PACKAGE LIST	10
WARRANTY.....	10

IMPORTANT SAFETY MEASURES



1. Do not place the system in a high-temperature, humid environment, let alone rain or a strong impact.
2. Do not open the back cover at will to prevent electric shock and other accidents.
3. If maintenance is required, please ask the company's maintenance station or professional maintenance personnel to handle it.
4. If the battery is improperly replaced, there is a danger of explosion, and it can only be replaced with the same type or equivalent type of battery.
5. In order to avoid charging failure, the original USB cable of this product must be used for charging. Accidents and machine damage caused by charging with other power cables will not be covered by the free warranty.
6. The product cannot be placed in a place with high temperature, exposure to the sun, or a fire source to prevent the battery from exploding or other dangers!

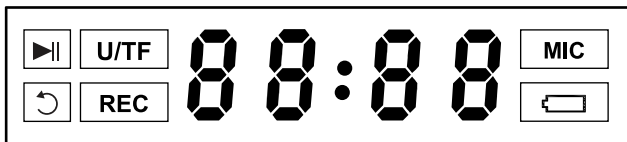DISPLAY SCREEN

 


	In the status of reading the USB key and TF card, this symbol lights up as a pause; In the status of LINE input and FM, it is mute.
U/TF	It lights up when playing the USB key and TF card.
MIC	It lights up when the wireless microphone is turned on.
	When the USB/TF card is playing, the light is in the single cycle mode.
88:88	When the LINE input is selected, "AUX" is displayed; in FM radio mode, the frequency number of the current channel is displayed; during USB Key and TF card playback, the playing time of the track is displayed; and when playback of USB/TF is paused, "PAUSE" is displayed.
	When the light on this symbol starts to flash, it means that the battery is low and you should charge the device with an adapter. Otherwise, if you continue to play, it will enter standby and shut down. At the same time, the volume will also drop to 50% when the low battery light is displayed.

OPERATION PANEL

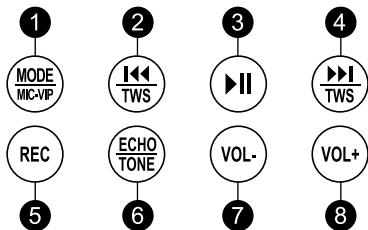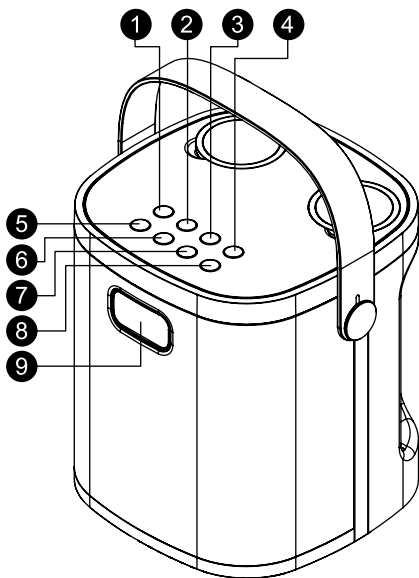 


- | | |
|---------------------------------|-----------------------|
| 1 Mode/Microphone priority | 6 Echo/Tone Variation |
| 2 Previous Track/TWS Connection | 7 Master Volume Down |
| 3 Play/Pause | 8 Master Volume Up |
| 4 Next Track/TWS Disconnect | 9 Display Screen |
| 5 Recording | |

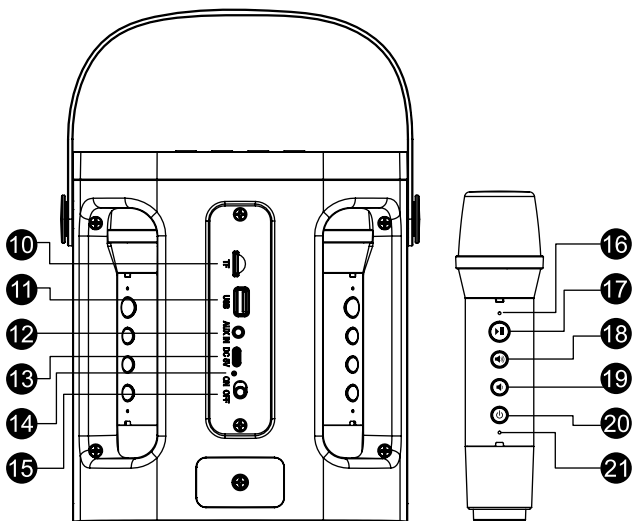

- 10 TF Card Slot
- 11 USB Flash Drive Slot
- 12 3.5mm AUX In Port
- 13 Type-C 5V Charging Port
- 14 Speaker Charging Indicator Light
- 15 Power On/Off
- 16 Microphone Indicator Light
- 17 Play/Pause
- 18 Microphone Volume Up
- 19 Microphone Volume Down
- 20 Microphone On/Off
- 21 Microphone Charging Indicator Light

MICROPHONES

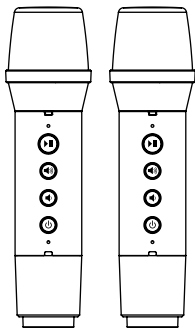

1. This speaker includes two wireless rechargeable microphones.
2. Press and hold the microphone power button to turn on (off) the microphone. When the microphone is turned on, the blue indicator light is on.
3. Press the volume adjustment button on the microphone to adjust the microphone volume.
4. Press the play/ pause button on the microphone to control music play/pause.

5. When using the microphone, press the **"ECHO/TONE"** button on the speaker panel to change the ECHO level, or press and hold the button to change the voice tone; the switching order of the voice change is: (original voice)-(male to female)-(female to male)-(Loli voice)-(magic sound)
6. When playing music, press and hold the **"MODE/MIC-VIP"** button, it will enter MIC priority mode when using wireless mics.

BLUETOOTH

1. Power on the speaker. The default mode is Bluetooth. The display shows **"BLUE"** and it will flash.
2. Turn on the device's Bluetooth, search for **"EARISE T28"**, and click to pair.
3. A beep indicates a successful connection. The display **"BLUE"** stops flashing.
4. In the Bluetooth mode, press and hold the **"▶||"** button to disconnect and re-connect.

FM RADIO

1. Press the **"MODE/MIC-VIP"** button to switch to FM radio mode.
2. Press and hold the **"▶||"** button to automatically search for FM stations. The station will be saved automatically, the display screen shows **"P001"**, **"P002"**, etc.
3. When searching for stations, you can stop searching by pressing and holding the **"▶||"** button.
4. Press the **"▶▶"** or **"◀◀"** button to select a saved station.
5. It is suggested to search for radio stations automatically the first time you use it.

MP3

1. **USB:** Insert the USB with songs in MP3/WMA/FALC/WAV format to play.
2. **TF card:** Insert the TF card with audio files in MP3/WMA/FALC/WAV format to play.
3. In U/TF mode, press the "▶||" button to play/pause music, press and hold the button for cycle function, ONE (single cycle)-FOLD (folder cycle)-RAN (random play)-ALL (all cycle).
4. In AUX in mode, press the "▶||" button for the mute function.
5. In U/TF mode, press the "▶▶" or "◀◀" button for the previous or next song; press and hold the button to rewind and fast forward; double-click the button for the previous folder and the next folder, the display screen shows "F01", "F02", "F03", etc. (Users store different types of songs in different folders for quick search)

RECORDING

1. Please insert the USB or TF card first and ensure that there is enough recording storage space. You can use wireless microphones for recording.
2. Press and hold the "**REC**" button to enter the recording mode, at this time "**REC**" lights up.
3. During recording, press the "**REC**" button to pause or resume recording.
4. Press and hold the "**REC**" button again to complete the recording and play the last recording file.
5. When playing music, press the "**REC**" button to enter the recording playing state. The default setting is to play the last recording file. At this state, press the "▶▶" or "◀◀" button to select different recording files.

6. When playing the recording, press the **"REC"** button to exit the recording state and enter the music playing state.
7. Please note that it cannot play music and the recording files at the same time.
8. The recording only work for voices from the microphones.
9. When using the Bluetooth or AUX function, the recording function does not work.

TWS PAIRING

1. In Bluetooth mode, the speaker which is first connected to the mobile phone as the host.
2. Turn on another speaker (defined as a subordinate) and enter the Bluetooth mode.
3. Press and hold the "**⏮/TWS**" button on the host speaker, and enter the TWS connection state.
4. A beep indicates a successful connection. The speakers have been connected. The host speaker is the left channel, and the subordinate is the right channel.
5. If you want to disconnect TWS, press and hold the "**⏭/TWS**" button on the host speaker (subordinate can also do that)
6. In the TWS connection state, both host and subordinate speakers can all be controlled the volume and music.
7. Please note that the TWS function is only work in the Bluetooth mode.

CHARGING INSTRUCTION

1. When the low power symbol of the speaker is flashing, it means that the speaker in low power status needs to be charged, and the volume of the speaker will automatically drop down to 50% of max volume. Please use the included type-c charging cable to charge.
2. The USB power input should be greater than 5V/1A, if less than 1A will cause a longer charging time.
3. Below is the charging indicator:
 - Battery charging 0%-25%: the red light flashes at 0.5HZ.
 - Battery charging 25%-75%: the red light is on.
 - Battery charging 75%-98%: the red light is on, and the green light is flashing at 0.5HZ.
 - The battery is charged to 100%: the red light is off and the green light is on.
4. For the first time using, the speaker need to be charged for more than 12 hours.
5. The battery must be kept charged if the speaker is not working for a long time, otherwise the battery will be damaged.
6. The microphone has a built-in lithium battery, please use the included type-c charging cable to charge. The red light on the microphone lights up when charging, and turns off when fully charged.

SPECIFICATION

Output Power: 15W

Frequency Response Range: 60Hz-19KHz(-3dB)

Drive Unit: 5.25"3Ωx1

S/N Ratio: ≥65dB

Power Input: USB 5V 1A

Lithium Battery for Speaker: 3.7V 4400mAh

Dimension: 6.93" x 6.93" x 7.87"

PACKAGE LIST

1 x T28 Speaker
2 x Wireless Microphones
3 x Type-C Charging Cables
1 x User Manual

WARRANTY

EARISE guarantees one and a half years warranty and 60 days hassle-free return. We provides lifetime technical support. Please reach us via support@eariseshop.com.